

Release of New Security Software and Unavailability of Old Security Software for Toshiba USB Flash Memory

Users of the old Security Software “TransMemory_Secure3.exe”

The new Security Software is incompatible with the old Security Software “TransMemory_Secure3.exe”. If you install the new Security Software on your computer without disabling the old Security Software “TransMemory_Secure3.exe”, the area secured by the old Security Software “TransMemory_Secure3.exe” will become inaccessible. First, disable the old Security Software “TransMemory_Secure3.exe”. After that, install the new Security Software and enable it.


Before disabling the old Security Software, back up all the data you want to save to another drive or media.

The procedure to disable “TransMemory_Secure3.exe” will format the Toshiba USB Flash Memory and erase all the data saved in the user area of the Toshiba USB Flash Memory.

Procedure to disable “TransMemory_Secure3.exe”

1) Open “TransMemory_Secure3.exe”.


2) Click “Set up”.

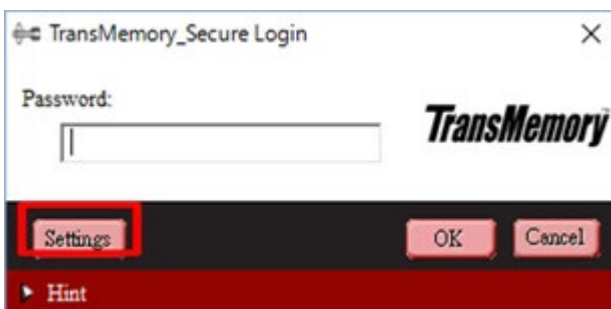

3) Click "Format".



 4) Move the slider of the privacy zone size to 0MB.

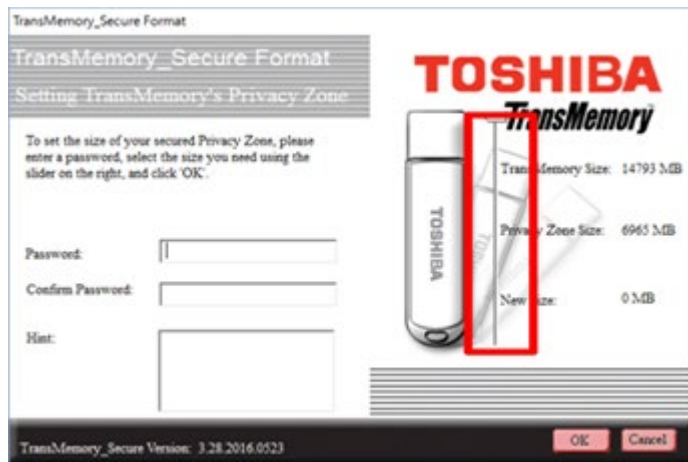

5) Click "OK" to format the Toshiba USB Flash Memory.

Now, you have finished disabling the old Security Software.

Delete the disabled "TransMemory_Secure3.exe" saved in your computer and/or your Toshiba USB Flash Memory. After that, download the new Security Software "SecuritySoftware.exe".